 
 


# Intel® Pocket Digital PC Camera


Your Quick Reference Field Guide

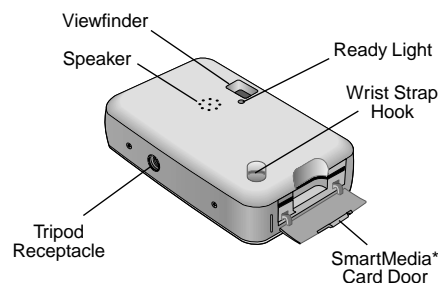

A27590-001

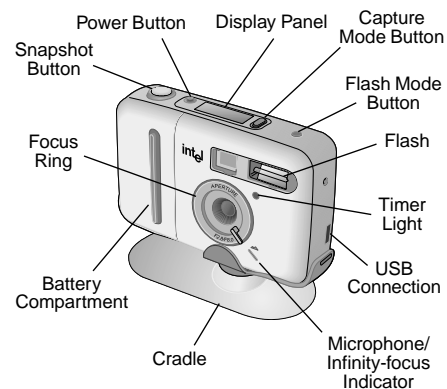


## Display Panel

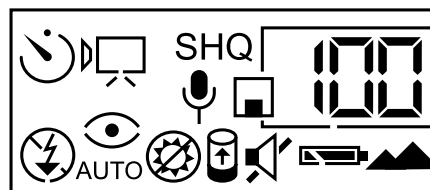



## Flash Modes

Press Flash Mode button to change modes.


**AUTO** *Auto Flash* – Only use flash when needed.

 *Flash On* – Always use flash.

 *Flash Off* – Never use flash.

 *Red-eye Reduction* – Use extra flashes to reduce red-eye effect.

## SmartMedia\* Card (Optional)

 *Card Inserted* – All snapshots and audio/video recordings will be saved on the SmartMedia\* card, if one is inserted.

\* Other names and brands may be claimed as property of others.


## Capture Modes


Press Capture Mode button to change modes.


 *Normal Quality Mode* – Takes a snapshot at 640x480 resolution.


**HQ** *High Quality Mode* – Takes a snapshot at 1024x768 resolution.

**SHQ** *Super High Quality Mode* – Takes a snapshot at 1280x960 resolution.


 *Multi-Snap Mode* – Takes five normal quality snapshots in rapid succession. Press Snapshot button to start. Flash not available.

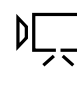
 *Video Clip Mode* – Captures continuous video with corresponding audio. Press Snapshot button to begin recording video. Press again to stop recording. Flash not available.


 *Voice Recorder Mode* – Records audio only. Press Snapshot button once to begin, and again to stop recording.


 *Self-timer Mode* – Waits 10 seconds before taking snapshot. Can be used with any snapshot mode, including Multi-Snap. Press Snapshot button to start. Timer light on front of camera shows countdown before snapshot is taken.


## Other Display Icons


 *Speaker On* – Press and hold Capture Mode button 3 seconds to turn camera sounds off or back on.


 *Focus Indicator* – Flashes when out of focus. Turn focus ring until it clicks into infinite-focus position. Other positions used only when connected to computer.

 *Full Battery* – Indicates strong battery.

 *Low Battery* – Flashes when batteries are low. Turns camera off after a short time.

 *Snapshot Indicator* – Shows number of snapshots and audio/video recordings in the camera. Press Snapshot button halfway to see remaining capacity. Displays REC when recording video or audio. Flashes when memory is full.

 *Low Light Indicator* – Appears when Snapshot button is pressed halfway if there is not enough light.

 *Remaining Memory* – Press Snapshot button halfway. The Snapshot Indicator shows how many times you can press Snapshot button in the current mode. Shows available recording time for Video Clip (in seconds) and Voice Recorder (in minutes), up to 999.

## Camera Buttons

**Power** – Turns camera on and off. If camera beeps twice when you turn it on, it means the camera is out of focus, batteries are low, or memory is full.

**Capture Mode** – Sets the current camera mode: Normal Quality, High Quality, Super High Quality, Multi-Snap, Video Clip, Voice Recorder, Normal Quality Timer, High Quality Timer, Super High Quality Timer, Multi-Snap Timer.

**Flash Mode** – Sets the current flash mode: Auto Flash, Flash On, Auto Flash with Red-Eye Reduction, Flash On with Red-Eye Reduction, Flash Off. Camera beeps if you try to set flash in a mode that does not use flash (Video Clip, Voice Recorder, or Multi-Snap modes).

**Snapshot** – Begins capturing in the current mode or starts the self-timer. Press halfway to see how many more snapshots you can take, or how much video/audio recording time is available.

## How to:

**Take Snapshots** – Check green Ready light on back of camera. Wait until it stops blinking to take pictures. Press Snapshot button all the way down. To avoid blurry images, hold camera still for a second after shutter sound, especially under low light conditions.

© 2001 Intel Corporation All rights reserved.

**Change Modes** – Press Capture Mode button to cycle through the capture modes.

**Use Flash** – Press Flash Mode button to cycle through the flash modes. When flash is on, Flash indicator blinks until it is ready to use.

**Turn On/off Sounds** – Press and hold Capture Mode button for 3 seconds.

**Use SmartMedia\* Card** – Insert a SmartMedia card to begin storing images and recordings on the card instead of the built-in memory. When the card is full, remove it to begin using the built-in memory. *Never remove the SmartMedia card while the green Ready light is blinking, or while downloading or deleting card content.*

**Erase Memory** – Press and hold Capture Mode and Snapshot buttons together for 3 seconds. If inserted, SmartMedia card will be erased. If no card is inserted, the built-in memory will be erased.

**Check Light Level when not Using Flash** – Press Snapshot button halfway. If low-light warning appears, adjust lighting or turn on flash.

**Check Memory** – Press Snapshot button halfway and check Snapshot Indicator. Number shows how many times Snapshot button can be pressed in current mode. In Video Clip or Voice Recorder mode, it shows available seconds of recording time, up to 999 seconds.

Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

## Camera Warnings

The following error conditions indicate a problem with the camera:

**Focus Indicator is Flashing:** Turn focus ring until it clicks into infinity-focus position.

**Snapshot Indicator is Flashing:** The camera's memory is full. Download your snapshots and recordings to the computer and erase the camera's memory. If a SmartMedia\* card is inserted, remove it to begin using the built-in memory.

**Battery Icon is Flashing:** The camera is about to shut down due to low battery condition. Batteries must be replaced.

**Low Light Warning:** If you press Snapshot button halfway and hear a beep, adjust lighting, turn on flash, or use a tripod.


**Note:** Erasing a SmartMedia card removes all data stored on that card, including information recorded from other SmartMedia card devices.

## Auto Shutoff

The camera will shut itself off to conserve battery life if you leave it on without pressing any buttons for about 3 minutes. Press the Power button to turn the camera back on.


## Connecting to your Computer

Download camera content by attaching the camera to your computer. Connect one end of the supplied USB connection cable to the camera as shown below. Connect the other end of the cable to a USB port on your computer.

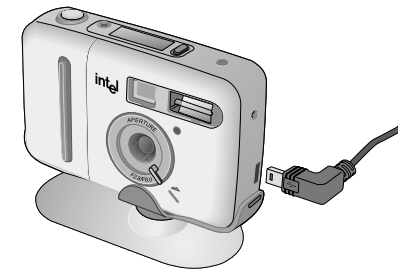

## Changing Batteries

Slide the battery cover open as shown below. Insert 4 AAA batteries into the compartment. Be sure to insert all batteries with their polarity matching the + and – symbols marked inside the compartment.

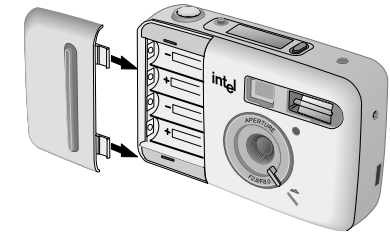

## Need more information?

The online help and manual contain complete information on connecting your camera and downloading snapshots, audio and video clips to your computer.

- To open program help, run Intel® Create & Share™ Software and click Help.
- To open online manual, click Start > Programs > Intel Create & Share Software > PC Camera Software > Manual.